

School Bell Timer + Multi Event Timer



Product Overview:

- TimeLine Multi is an Event Based pre-settable timer in which user can feed the schedule at once and it will control the load as per the schedule and given time.
- Developed mainly for:
 - **Scholl Bell ON/OFF** in pre-scheduled manner and at accurate time with taking care of holidays.
 - **Factory sirens, Office Tea time/Lunch time Bells** control in pre-scheduled manner.
 - **Water Irrigation System (Sprinkler)** control in pre-scheduled manner.
 - **Home Appliance control** at pre-scheduled time mainly for:
 - Water Heater, Geyser.
 - Washing Machine.
 - Air Conditioner (AC) Control.

<u>Salient Features</u>	<u>Specifications</u>
<ul style="list-style-type: none"> • 16x2 LCD display and 3 Keys for user • Max. 30 Programmable events per day. • Weekdays setting for each event. • 20 user programmable holiday dates. • 10 user programmable holiday date ranges. • Programmable event ON time duration. • Bypass mode for manual operation. • Timer Modes: 1.School Bell timer 2.Multi Event Timer 	<ul style="list-style-type: none"> • Supply Voltage: 130V-350V AC/50Hz • Output Contact ratings: 5 KW at 230V • Dimensions: 73 (H) x 118(V) x 63(D) • Compliant To the following IEC standards: <ul style="list-style-type: none"> IEC 61000-4-4 IEC 61000-4-5 IEC 61000-4-11 IEC 61000-4-14 IEC 61000-4-28

Note: The only difference in School bell mode is that Bypass mode keeps the load ON only for 15 seconds, as to avoid the school bell ringing continuously and getting damaged.

Operating Instructions:

1. Current Date and time settings

Step	Operation	Key	Display
1	To Select date and time edit settings	Press (MENU+UP+EDIT) for 2 seconds	‘Date’ field of current date blinks(DD:MM:YY)
2	To change the value of blinking field	Press UP key	Value corresponding to blinking field increases
3	To move the cursor to next field	Press EDIT Key	Next field blinks
4	To save and exits Current date/time settings	Press EDIT key till blinking cursor is at the last field and press EDIT key one more time	‘SETTINGS SAVED’ message flashes
*Note: If settings are left incomplete (no key is pressed for 10 seconds), whatever setting done so far will automatically get saved after 10 seconds and setting mode exits.			

2. Select Bypass Mode (Manual ON/OFF) For Multi Event Timer

Step	Operation	Key	Display
1	To Select Bypass Mode	Press and hold (MENU+UP) keys for 2 seconds.	‘BYPASS MODE’ is displayed
2	To exit from Bypass Mode	Press and hold (MENU+UP) keys for 2 seconds.	Default display as ‘HH:MM:SS’, ‘DD/MM/YY [DAY]’

*Note: Bypass mode is used for manually turning ON or OFF the load.

3. Select Bypass Mode (To Manually Ring the Bell) For School Bell Timer

Step	Operation	Key	Display
1	To Select Bypass Mode	Press and hold (MENU+UP) key for 2 seconds.	‘BYPASS MODE’ is displayed

*Note: Bypass Mode Will Only keep the Bell ON for 15 seconds after that it will automatically OFF.

4. To VIEW/EDIT events

Step	Operation	Key	Display				
1	To enter main menu	Press MENU key for 2 seconds	' MENU: ' '> VIEW/EDIT '				
2	To scroll menu items	Press UP key	' MENU: ' '> HOLIDAY RANGE '				
3	Next menu item	Press UP key	' MENU: ' '> HOLIDAY '				
Pressing 'UP' key shows next menu item in the list							
3	To enter VIEW/EDIT event settings	Press EDIT key when 'VIEW/ EDIT' option is onscreen	'#01 AT HH:MM' 'OFF FOR HH:MM:YY' And ' S M T W T F S ' ' X V X V X V V ' Alternately				
Settings of Event No. 1 are shown on Display. This is VIEW mode.							
<div style="display: flex; justify-content: space-around; align-items: flex-start;"> <div style="text-align: center;"> <p>Event #01</p> <div style="border: 1px solid black; padding: 2px; margin: 5px;"> ON - Enable
 OFF - Disable </div> </div> <div style="text-align: center;">  </div> <div style="text-align: center;"> <p>ON time
 HH:MM</p> </div> <div style="text-align: center;"> <p>Duration
 HH:MM:SS</p> </div> <div style="text-align: center;"> <p>Weekdays
 Settings of Event
 #01</p> <div style="border: 1px solid black; padding: 2px; margin: 5px;"> <table border="1" style="font-size: small;"> <tr><td>Enable</td><td style="text-align: center;">V</td></tr> <tr><td>Disable</td><td style="text-align: center;">X</td></tr> </table> </div> </div> </div>				Enable	V	Disable	X
Enable	V						
Disable	X						
4	To view next event in the list	Press UP key	'#02 AT HH:MM' 'OFF FOR HH:MM:SS ' And ' S M T W T F S ' ' X V X V X V V ' Alternately				
*Event which is currently being displayed can be edited right there by pressing 'EDIT' key							
5	To edit event currently	Press EDIT key	'OFF' field of blinks.				


Step	Operation	Key	Display
6	To change the value of blinking field	Press UP key	Value of blinking field changes
7	To move to next field	Press EDIT key	Next field blinks
<p>*Similarly, all fields can be edited. After duration is set, weekdays settings for the same event is displayed ‘ S M T W T F S ’ ’ x x x x x x x ’ First Cross mark of Sunday blinks.</p>			
8	To change the value of blinking field (X or V)	Press UP key	Value of blinking field changes
9	To move to next Field	Press EDIT key	Next field blinks
<p>Once all days are set, ‘CHANGES SAVED’ message is displayed and control is back to ‘VIEW’ Mode with display as:</p> <div style="display: flex; align-items: center; justify-content: center;"> <div style="border: 1px solid black; padding: 5px; margin-right: 20px;"> XX – Event No. </div> <div style="border: 2px solid black; padding: 10px; text-align: center;"> ‘#XX AT HH:MM’ ‘OFF FOR HH:MM:YY’ And ‘ S M T W T F S ’ X V X V X V V </div> <div style="margin-left: 20px;"> ← Alternately ← </div> </div> <p style="text-align: center;">Now, you can use UP key to VIEW event Also, Pressing ‘MENU’ button anywhere in the Menu takes the settings one step back by automatically saving the current changes.</p>			
10	To exit from VIEW/EDIT option	Press MENU key.	‘ MENU:’ ‘ > VIEW/EDIT ’
11	To exit from the menu	Press MENU key again.	‘HH:MM:SS’ ‘DD/MM/YY [DAY] ’
<p>Default display contents are ‘HH:MM:SS’ ‘DD/MM/YY [DAY]’ Also, upcoming event is shown alternately for 4 seconds.</p>			

5. View/edit Holiday Range Settings

Step	Operation	Key	Display
1	To enter main menu	Press MENU key for 2 seconds	' MENU: , > VIEW/EDIT ,
2	To scroll menu items	Press UP key	' MENU: , > HOLIDAY RANGE '
3	To enter 'HOLIDAY RANGE' settings	Press EDIT key	'#01 FRM DD/MM/YY' 'OFF TO DD/MM/YY'
<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="border: 1px solid black; padding: 5px; margin: 5px;">Range #01</div> <div style="text-align: center;">This is VIEW mode.</div> <div style="border: 1px solid black; padding: 5px; margin: 5px;">Start date</div> </div>  <div style="border: 1px solid black; padding: 5px; margin: 5px; width: fit-content;">ON - ENABLE OFF - DISABLE</div> <div style="border: 1px solid black; padding: 5px; margin: 5px; width: fit-content;">End date</div>			
4	To view next holiday in the list	Press UP key	'#02 FRM DD/MM/YY' 'OFF TO DD/MM/YY'
*Holiday range which is currently being displayed can be edited right there by pressing 'EDIT' key			
5	To edit holiday info currently displayed on LCD	Press EDIT key	Date field of start date blinks
6	To change the value of blinking field	Press UP key	Value of blinking field changes
7	To move to the next field	Press EDIT key	Next field blinks
*Similarly, all fields can be edited. After last field is set by pressing NEXT key, changes are saved and control is back to VIEW mode.			
8	To exit from holiday settings	Press MENU key	'MENU: > HOLIDAY RANGE ,
9	To exit from the menu	Press MENU key again	'HH:MM:SS , 'DD/MM/YY [DAY] ,
<p>*Note:</p> <ol style="list-style-type: none"> Pressing MENU button anywhere in the Menu takes the settings one step back by automatically saving the current changes. If settings are left incomplete (No key is pressed for 2 minutes), whatever setting done so far will automatically get saved after 2 minutes and setting mode exits. 			

6. View /Edit Holiday Settings

Step	Operation	Key	Display
1	To enter main menu	Press MENU key for 2 seconds	‘ MENU: , > VIEW/EDIT ,
2	To scroll menu items	Press UP key	‘ MENU: , > HOLIDAY ,
3	To enter ‘HOLIDAY’ settings	Press EDIT key	‘HOLIDAYS: , #01 DD/MM/YY [x] ,

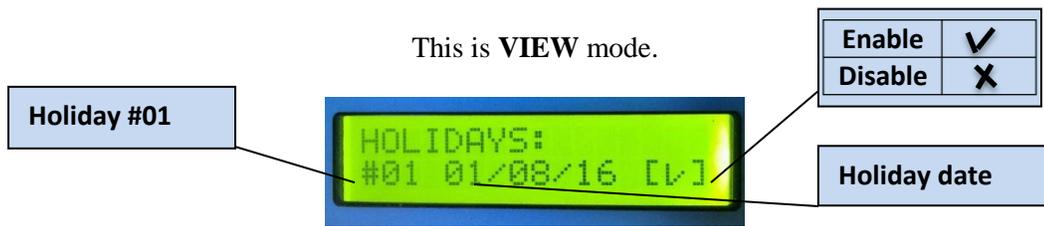

Step	Operation	Key	Display
4	To view next holiday in the list	Press UP key	‘HOLIDAYS:’ #02 DD/MM/YY [x] ,
*Holiday info which is currently being displayed can be edited right there by pressing ‘EDIT’ key			
5	To edit holiday info currently displayed on LCD	Press EDIT key	Date field blinks
6	To change the value of blinking field	Press UP key	Value of blinking field changes
7	To move to the next field	Press EDIT key	Next field blinks
*Similarly, all fields can be edited. After last field (cross/tick) is set, changes are saved and control is back to VIEW mode.			
8	To exit from holiday settings	Press MENU key.	‘MENU:’ ‘> HOLIDAY’
9	To exit from the menu	Press MENU key again.	Default display as ‘HH:MM:SS’ ‘DD/MM/YY [DAY]’

***Note:**


1. Pressing **MENU** button anywhere in the Menu takes the settings one step back by automatically saving the current changes.
2. If settings are left incomplete (No key is pressed for 2 minutes), whatever setting done so far will automatically get saved after 2 minutes and setting mode exits.

7. To Select Timer Mode: School Bell Timer / Multi Event Timer


Step	Operation	Key	Display
1	To Select School Bell Mode	Press and hold (UP Key) for 6 seconds.	“Timer Mode: School Bell “ is displayed
2	To Select Multi Event Mode	Press and hold (UP Key) for 6 seconds.	“Timer Mode: Multi Event” is displayed

Wiring Guide:

- **Terminal Connections For Single phase load up To 4 kw**

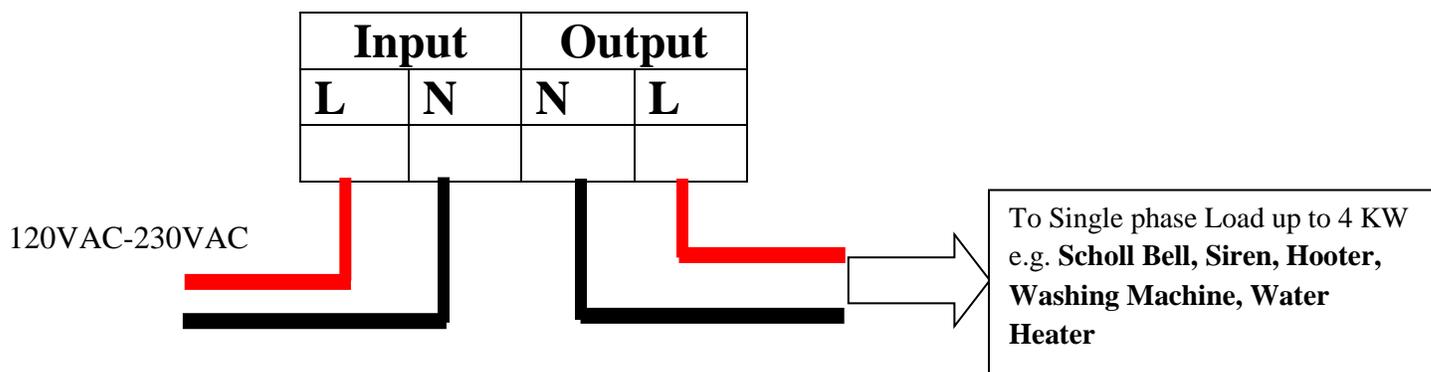

- **Terminal Connection For 3 Phase Load**

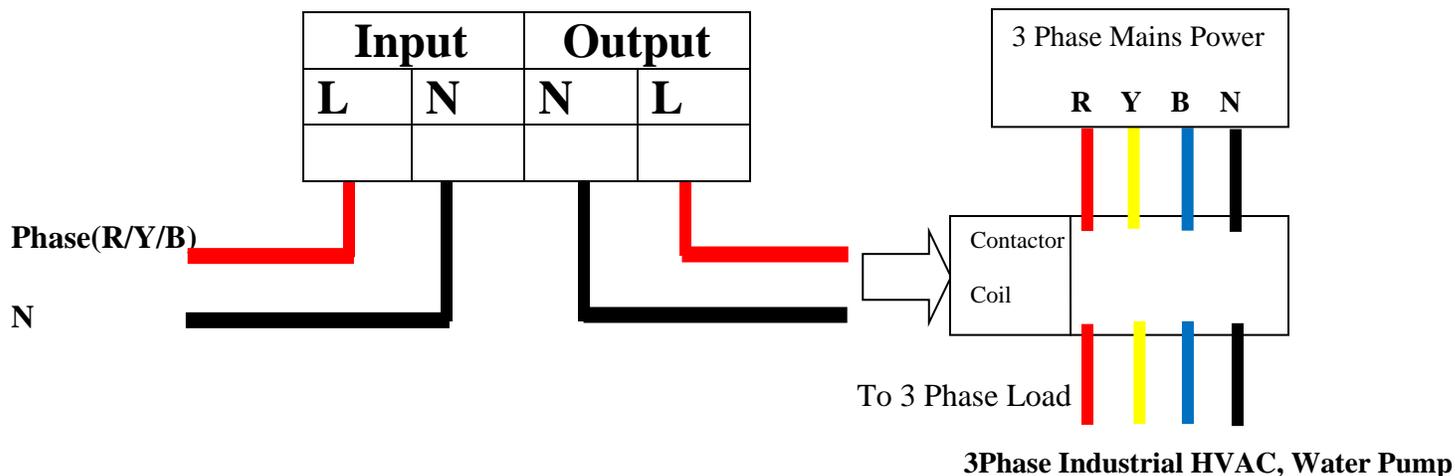

Replacing Battery used for Clock backup:

This product contains in-built 3V CR2032 Lithium cell for power failure memory purpose. Expected battery life is 3 to 4 years.

When the battery is drained, 'Battery Low!!!' is seen on the LCD display.

To change the battery :



CR2032 3V Button cell

- 1. Remove battery as shown in figure below**



Open the top cover locate the Battery placed below LCD



Press the battery lock with the help of a small screw driver and pluck out the battery with the help if a pointed object or tweezers

- 2. Replace battery with the same type cell i.e. 3V CR2032 with positive terminal of battery facing upwards.**

***Note:** After replacing the battery, time and date settings are lost and needs to be done again. However, Event and holidays settings remains unaffected even if battery is removed.